

ProChondrix



PROCHONDRIX INSTRUMENTED SURGICAL TECHNIQUE – Vishal Mehta MD




Use sizer to determine appropriate graft size (7,9,11,13,15,17,20). Engage drill guide to desired surface area.



Rotate T Handle drill 360 degrees until it meets its depth stop. Fine tune bed and periphery with curette if needed.

ProChondrix

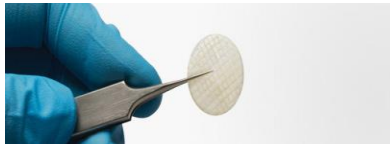

Micro Fx drill the bed with 1-2mm drill to preferred depth. Apply fibrin glue to the bed and periphery.



Apply ProChondrix graft to the prepared site. Apply fibrin glue to the top, and let set per manufacturers recommendations



Cycle knee several times and check to make sure graft is still securely in place.

Tips and Pearls

- Tisseel is preferred, but Evicel is acceptable. Do not use Surgiflo. Allow approximately 5 minutes to set.
- The instruments used should be 2mm larger than the graft size selection to allow a 1mm gap. If 20mm graft use 22mm instruments. If 15mm graft, use 17mm instruments
- This ProC disc is approximately 1mm thick. Ideal depth of prepared area should be approximately 3mm to allow for fibrin glue and graft depression.

ProChondrix

